



## ZW damper position presetting unit

ZW damper Position Presetting Unit enables presetting of the damper in any desired position so that the exact required air flow from the outside is established. The ZW damper position presetting unit is placed inside of or on the door of the control box.

## ZW damper position presetting unit

|                    |            |
|--------------------|------------|
| Напряжение питания | 24V AC     |
| Управляющий сигнал | 0...10V DC |
| Степень защиты     | IP42       |