



ZW damper position presetting unit

ZW damper Position Presetting Unit enables presetting of the damper in any desired position so that the exact required air flow from the outside is established. The ZW damper position presetting unit is placed inside of or on the door of the control box.

ZW damper position presetting unit

Напряжение питания	24V AC
Управляющий сигнал	0...10V DC
Степень защиты	IP42